
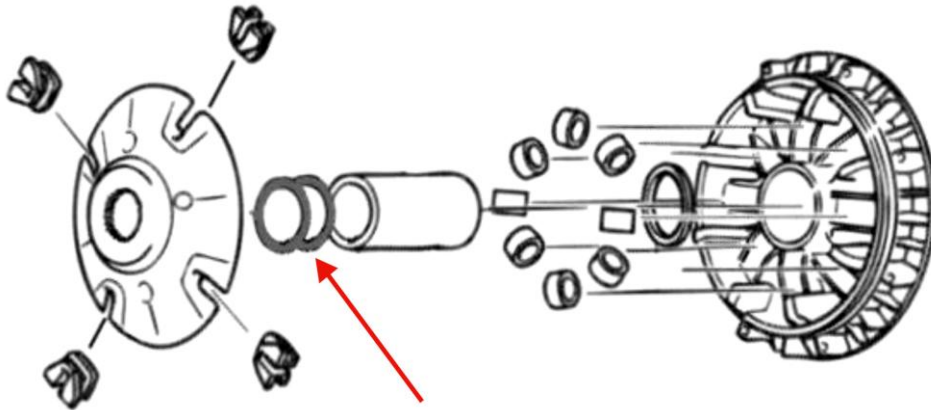


<p><b>Shim</b></p>	<ul style="list-style-type: none"> <li>- Fits between pin and cone fan drive,</li> <li>- improves the standing start and acceleration,</li> <li>- increases the reggime working clutch / shorten the reports of the variator.</li> </ul> <p><b>How it Works:</b>          Serve to increase the length of the hub of the drive, you can mount from 1x (S1) to 4x (S4).          The shims are mounted inside the drive, between the hub and the bell guide rollers.          Stretching the length of the hub shorten the reports of the drive, will raise the number of revolutions of working drive (RPM) and slightly decreases the load of the spring contrast.</p>	
--------------------	---	---

© opyright



1) Disassemble pulley and insert the Shim washers as shown ( See calibration Table ).